

ENIAC Simulator Command Reference

Commands

- b: Press a button
- d: Display a unit status
- D: Display all unit statuses
- f: Associate a file with the punch or reader
- l: Load a configuration file
- p: Plug in a jumper
- q: Quit
- r: Reset a single unit
- R: Reset all units
- s: Set a switch setting
- u: Declare units being used
- dt: Declare the number of data trunks in use
- pt: Declare the number of program trunks in use