



TERMINALS 1, 2, 3, ..., 30
 Program input pulse terminals associated respectively with constant selector switches 1-30.

TERMINALS 10, 20, ..., 30
 Program output pulse terminals associated respectively with constant selector switches 1-30.

CONSTANT TRANSMITTER
 FRONT PANEL NO. 1
 PX-4-302 R