


IBM READER PLUG BOARD

Illustrative plugging arrangement for Hreset Control Instructions  
with the Polarity Switch in the Normal Position.

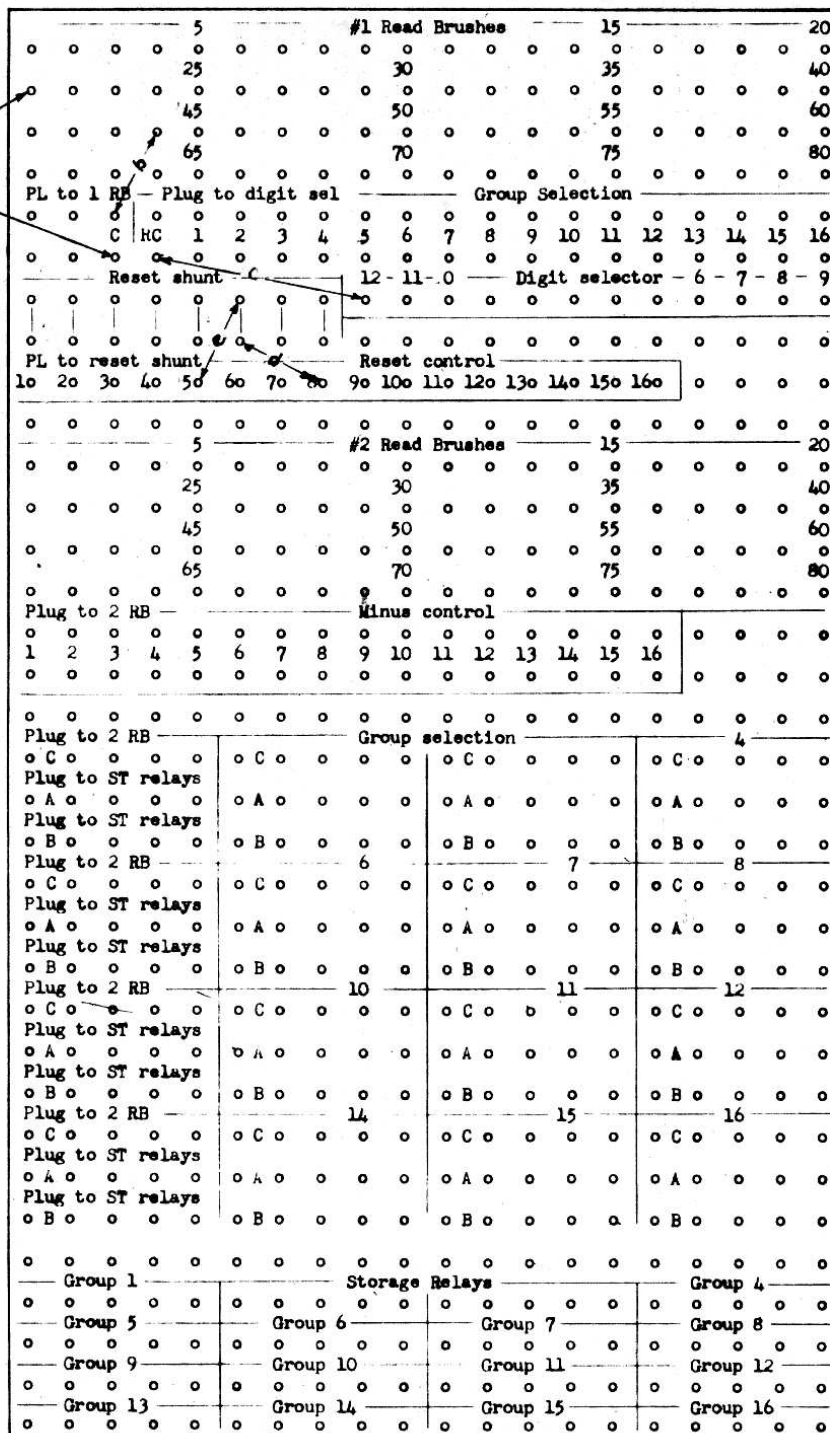

INSTRUCTIONS

(The line which carries the instruction appears in parenthesis)

When a 12 punch (c) appears in column 21 (a) or in column 44 (b), reset control is to operate (c).  
The reset control consists of dropping out the master information stored in group 5 (e) and group 8 (d) storage relays.

IBM READER  
PLUG BOARD  
PK-11-30521