


IBM READER PLUG BOARD

6

Illustrative plugging arrangement for Group Selection Instructions  
with the Polarity Switch in the Normal Position,

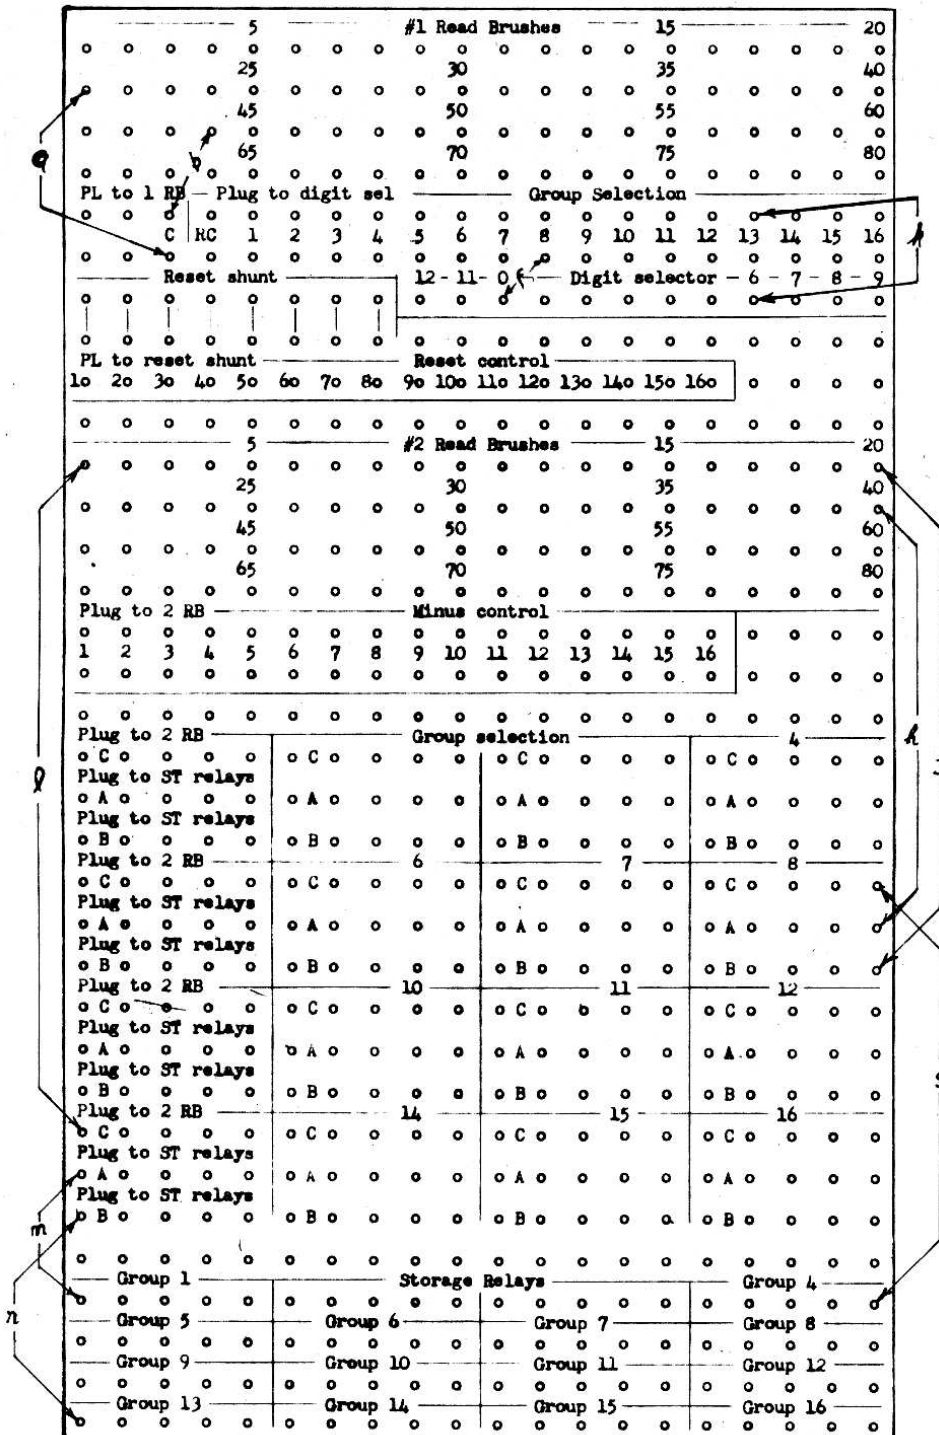

INSTRUCTIONS

When a 0 punch (f) appears in either column 21 (a) or column 44 (b), the 5th digit of group 4 storage relays (g) will come from column 20 of the card (j). Otherwise, the 5th digit of group 4 storage relays will come from column 40 of the card (h).

When a 6 punch (k) appears in either column 21 (a) or column 44 (b), the digit appearing in column 1 of the card (l), will be put in the storage relays for the first digit of group 13 (n); otherwise it will be put in the storage relays for the first digit of group 1 (m).

IBM READER  
PLUG BOARD  
PX-11-305A2