


IBM READER PLUG BOARD

Illustrative plugging arrangement for Reset Control and Group Selection Instructions with the Polarity Switch in the abnormal position.

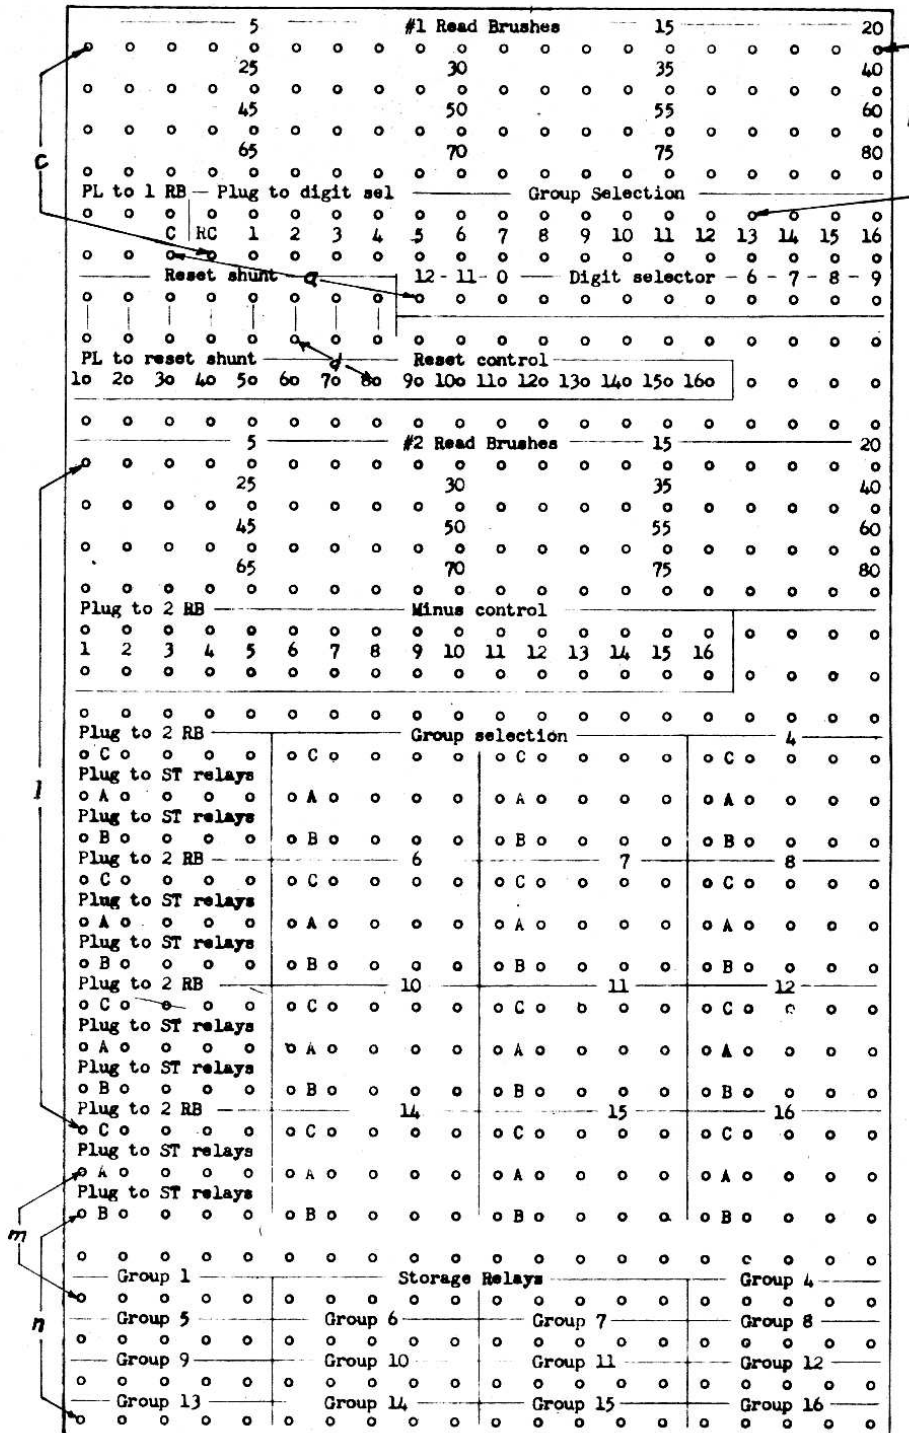

INSTRUCTIONS

When a 12 punch (a) appears in column 1 (c), reset control (c) takes place for the group 8 storage relays (d).

When a 12 punch (a) appears in column 20 (k), then data from column 1 on the card (1) is put in the first digit storage relays for group 13 (n). Otherwise data from column 1 is put in the storage relays for the first digit of group 1 (m).

IBM READER
PLUG BOARD
PX-11-305 R3