


IBM GANG PUNCH  
PLUS BOARD  
PX-12-30521

The 10 digits stored in the printer relays for groups 1 and 2 are to be printed in the columns 1-10 of the card (b.....d). Minus sign indication for these digits (e) is to be punched in column 1 (a).  
The digits for the first and second lines of printer Group 1 (f and h) are to be punched in columns 96 (h) and 17 (g) respectively. The minus punch for Group 12 (e) is to appear in column 17 (g).

PLUGGING FOR NEGATIVE NUMBERS

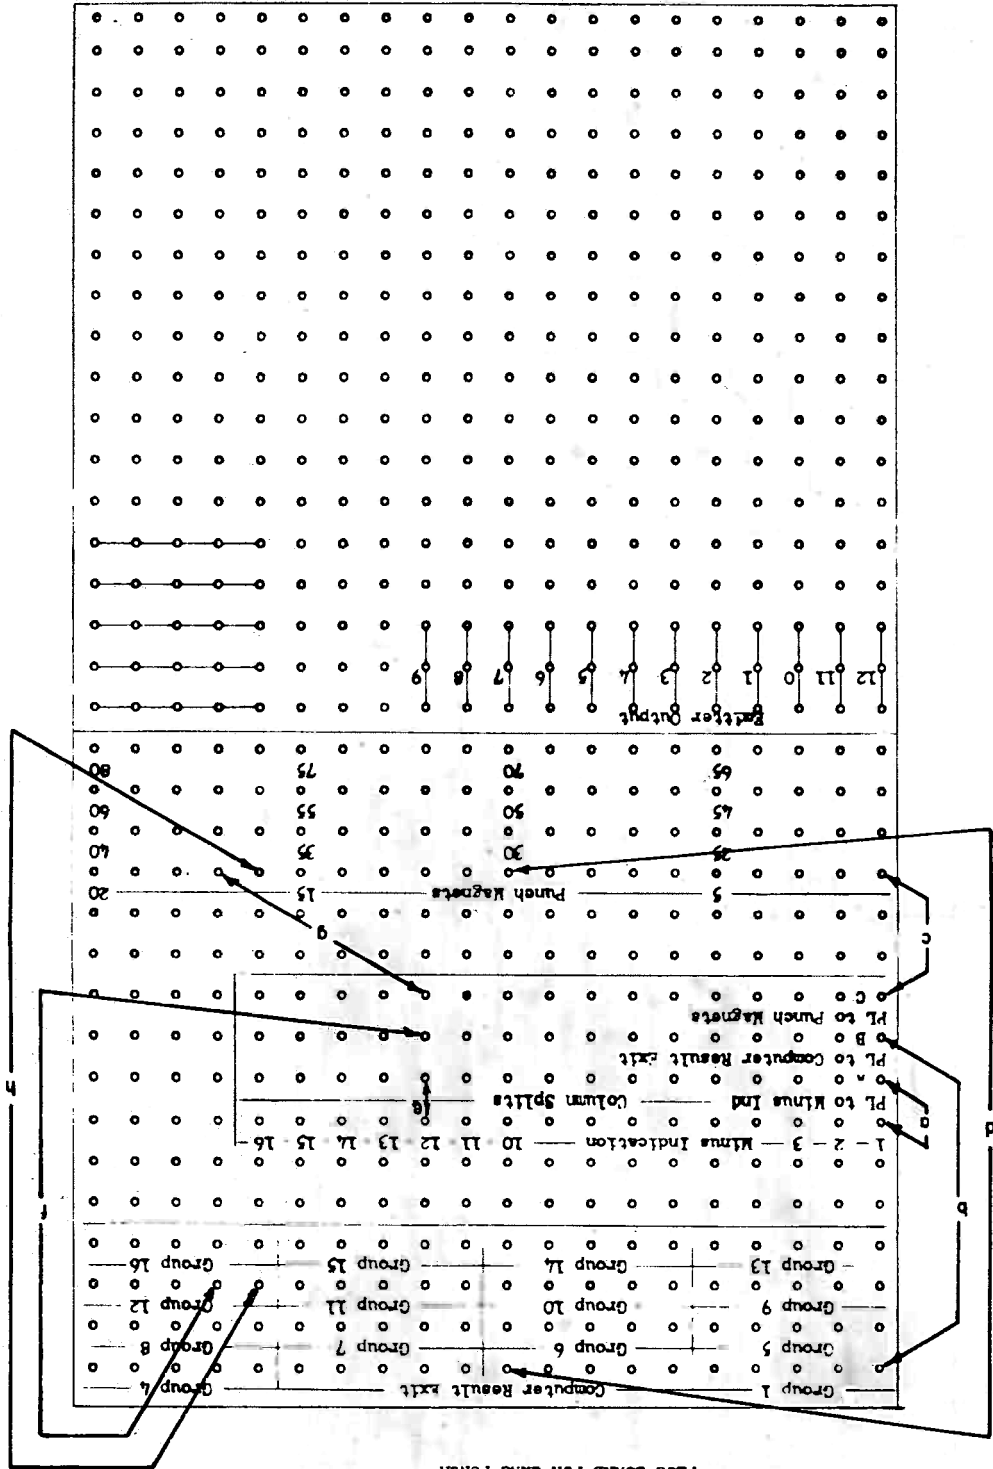

PLUG BOARD FOR GANG PUNCH