



TERMINALS 11, 21, ..., 121
Program pulse input terminals

TERMINALS 50, 60, ..., 120
Program pulse output terminals

ACCUMULATOR
FRONT PANEL
PX-5-301R