



TERMINALS 50, 60, 70, 80
 Program pulse output terminals

TERMINALS 11, 21, 31, 41
 Program pulse input terminals

ACCUMULATOR
 FRONT PANEL
 PX-5-301 R