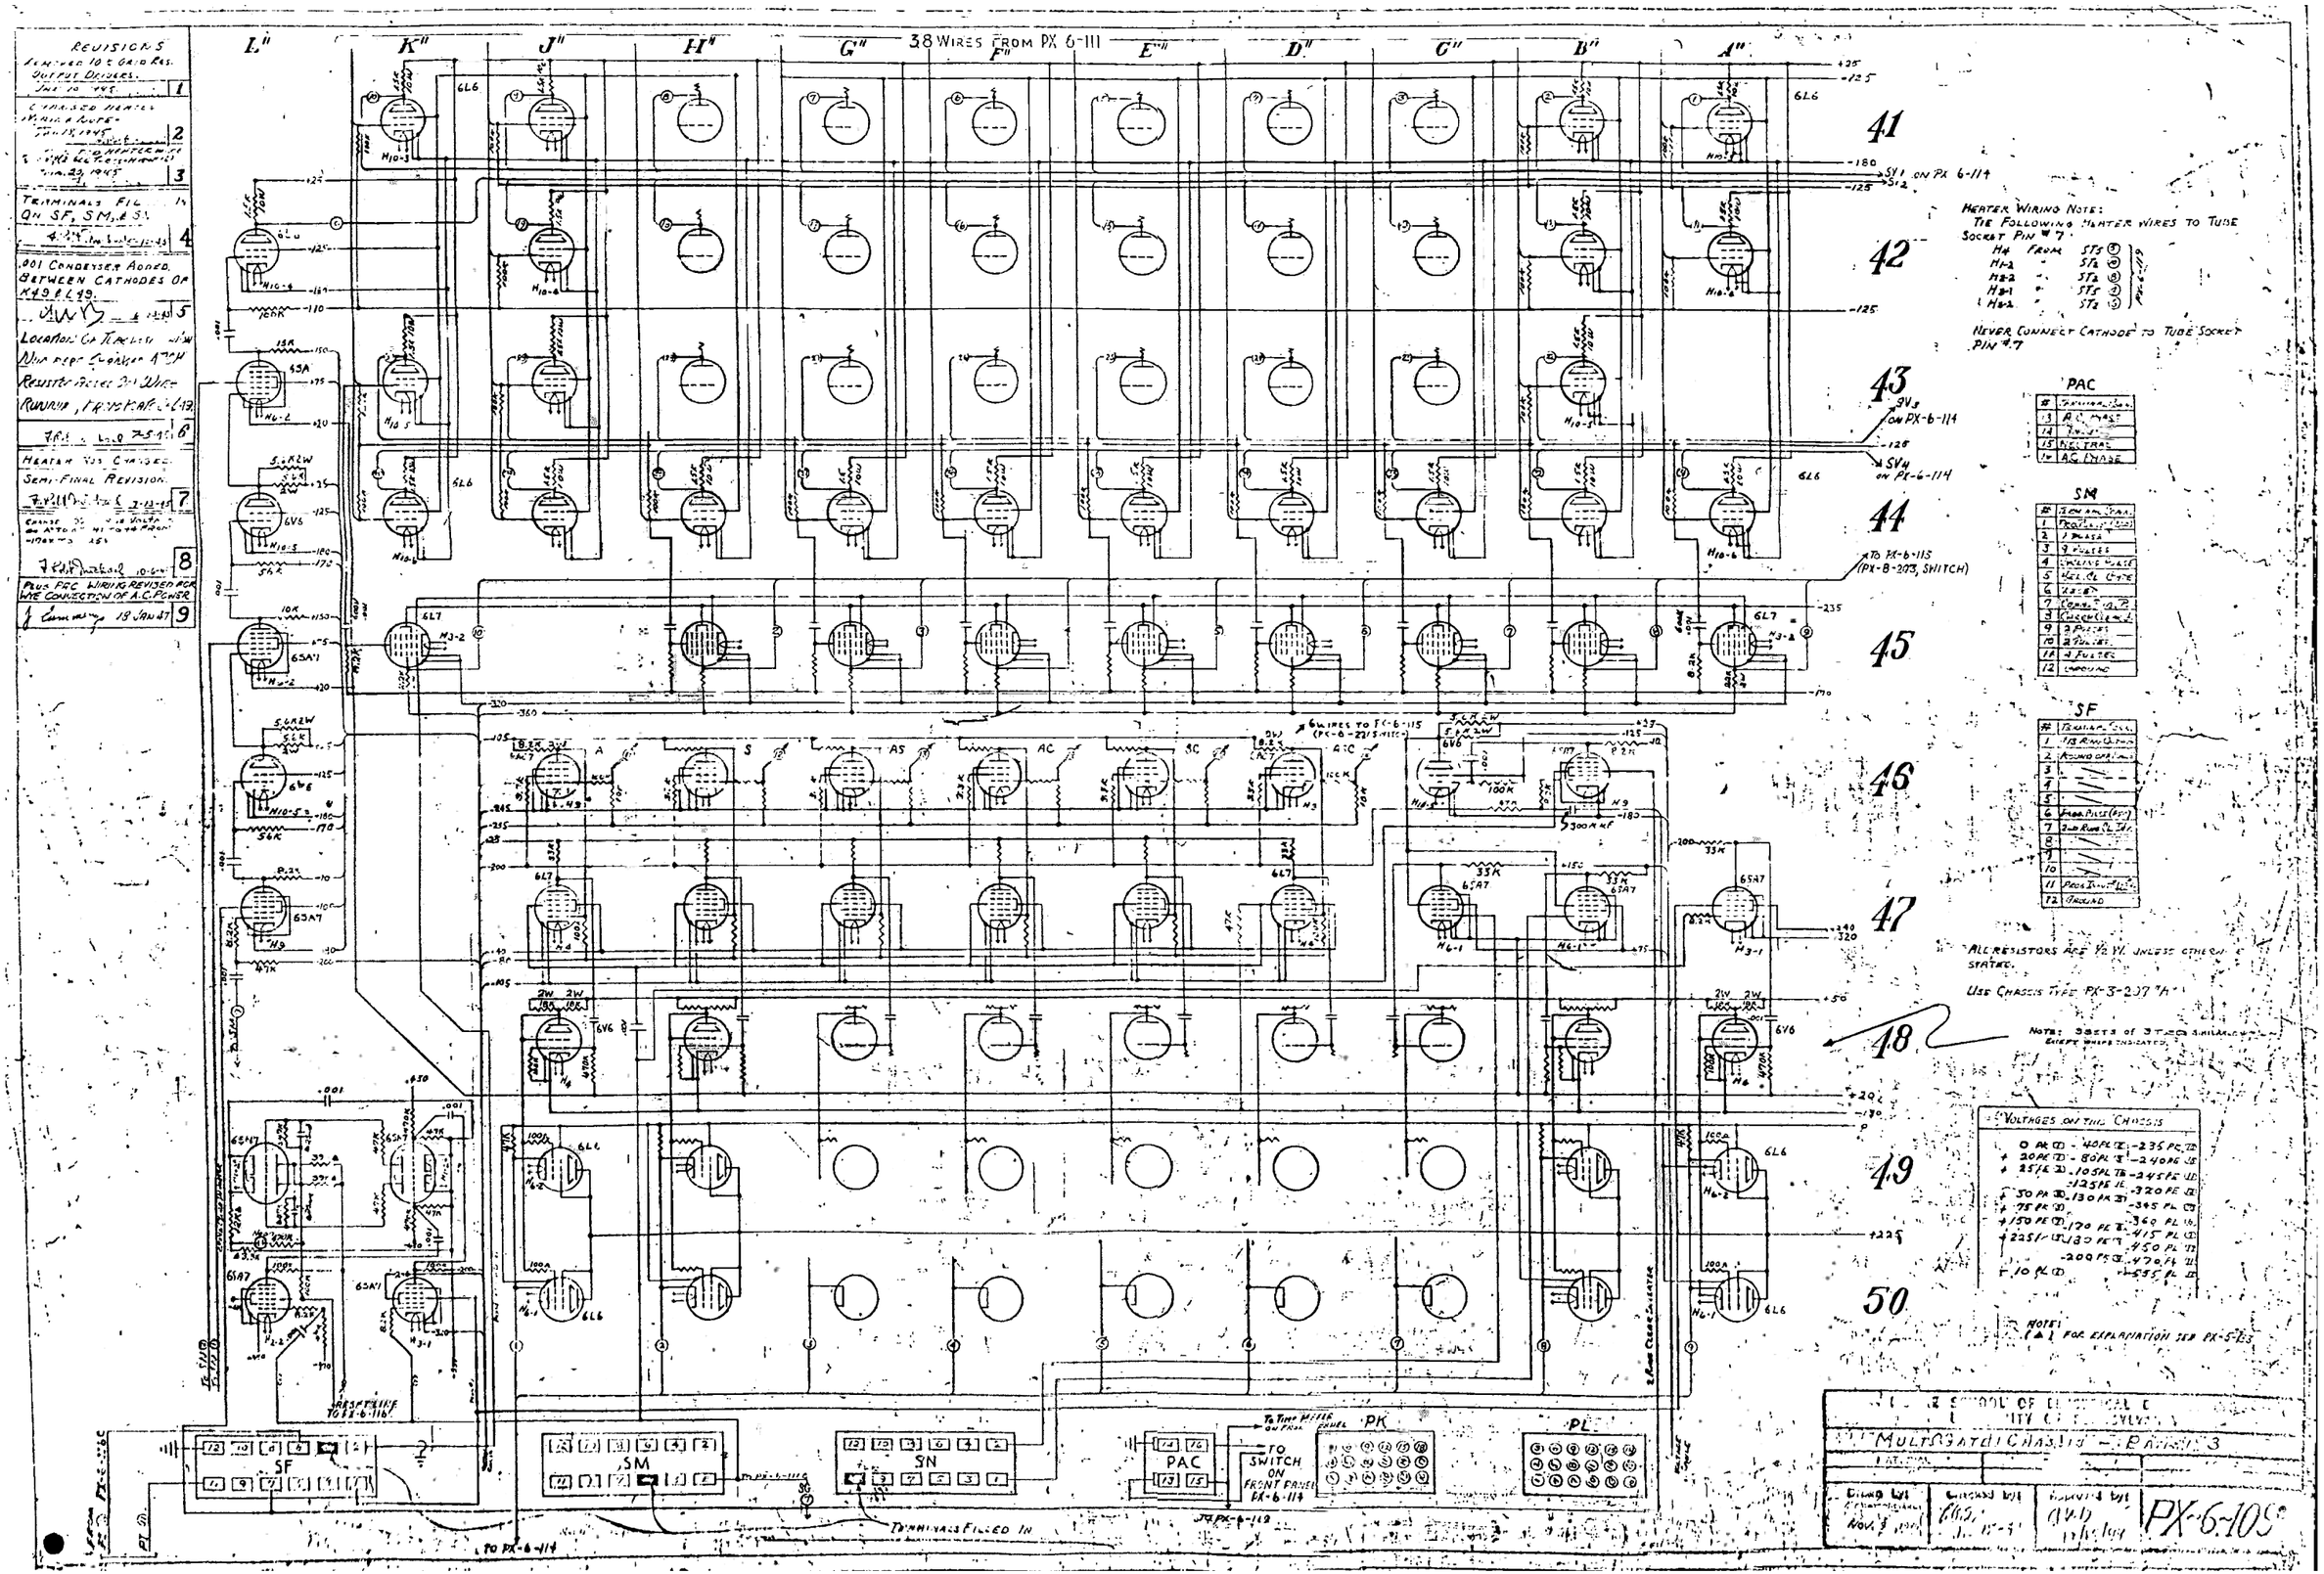
38 WIRES FROM PX 6-111
L" K" J" H" G" F" E" D" C" B" A"
41
42
43
44
45
46
47
48
49
50
SV1 ON PX 6-114
SV2
SV3 ON PX-6-114
SV4 ON PX-6-114
TO PX-6-115 (PX-B-203, SWITCH)
6 WIRES TO PX-6-115 (PX-6-221 S-115)
HEATER WIRING NOTE:
THE FOLLOWING HEATER WIRES TO TUBE SOCKET PIN #7
NEVER CONNECT CATHODE TO TUBE SOCKET PIN #7
PAC
SM
SF
ALL RESISTORS ARE 1/2 W. UNLESS OTHERWISE STATED.
USE CHASSIS TYPE PX-3-237 "A"
VOLTAGES ON THE CHASSIS
SF
SM
SN
PAC
PK
PL
TO SWITCH ON FRONT PANEL PX-6-114
TERMINALS FILLED IN
TO PX-6-114
MULTIGRATID CHASSIS — PANEL 3
PX-6-105