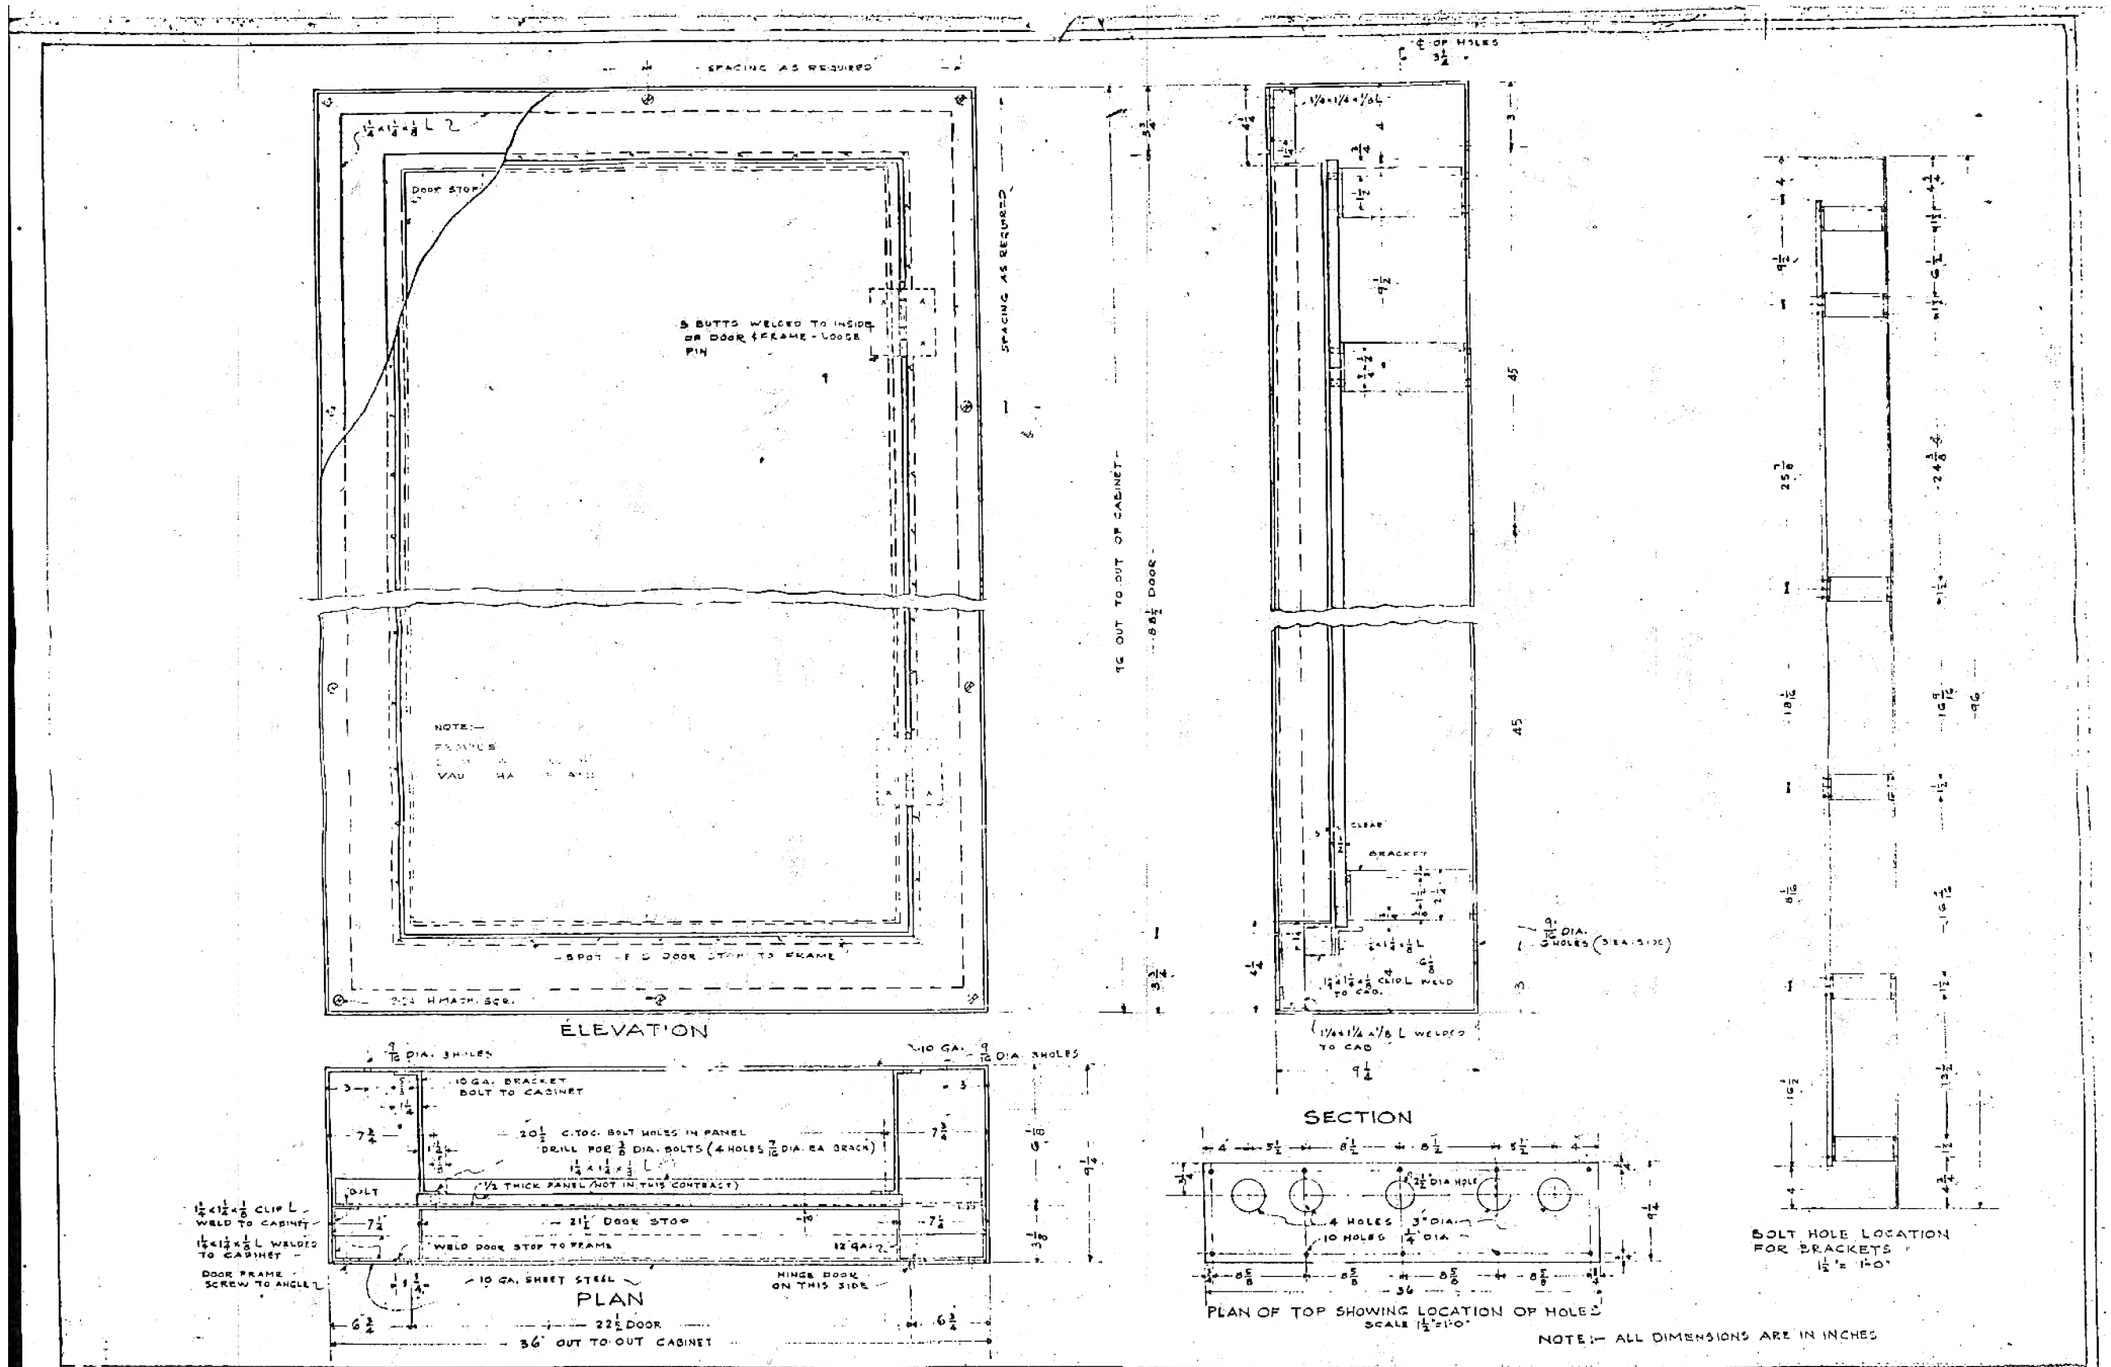
SPACING AS REQUIRED
DOOR STOP
3 BUTTS WELDED TO INSIDE OF DOOR & FRAME - LOOSE PIN
NOTE:-
SPOT F D DOOR STOP TO FRAME
ELEVATION
SPACING AS REQUIRED
96 OUT TO OUT OF CABINET
DOOR
CLEAR
BRACKET
9/16 DIA. 3 HOLES
10 GA. BRACKET BOLT TO CABINET
20 1/2 C.TO.C. BOLT HOLES IN PANEL
DRILL FOR 3/8 DIA. BOLTS (4 HOLES 7/16 DIA. EA. BRACK)
1 1/2 THICK PANEL (NOT IN THIS CONTRACT)
21 1/2 DOOR STOP
WELD DOOR STOP TO FRAME
10 GA. SHEET STEEL
HINGE DOOR ON THIS SIDE
DOOR FRAME SCREW TO ANGLE
PLAN
22 1/2 DOOR
36 OUT TO OUT CABINET
SECTION
4 HOLES 3" DIA.
10 HOLES 1/4" DIA.
PLAN OF TOP SHOWING LOCATION OF HOLES
SCALE 1 1/2" = 1'-0"
BOLT HOLE LOCATION FOR BRACKETS
1 1/2" = 1'-0"
NOTE:- ALL DIMENSIONS ARE IN INCHES
MOORE SCHOOL OF ELECTRICAL ENGINEERING
UNIVERSITY OF PENNSYLVANIA
FUSE CABINET
MATERIAL
FINISH
SCALE
SHEET STEEL (GA. AS NOTED)
2 COATS FLAT BLACK
FULL SIZE
Drawn by
Checked by
Approved by
PX-13-212