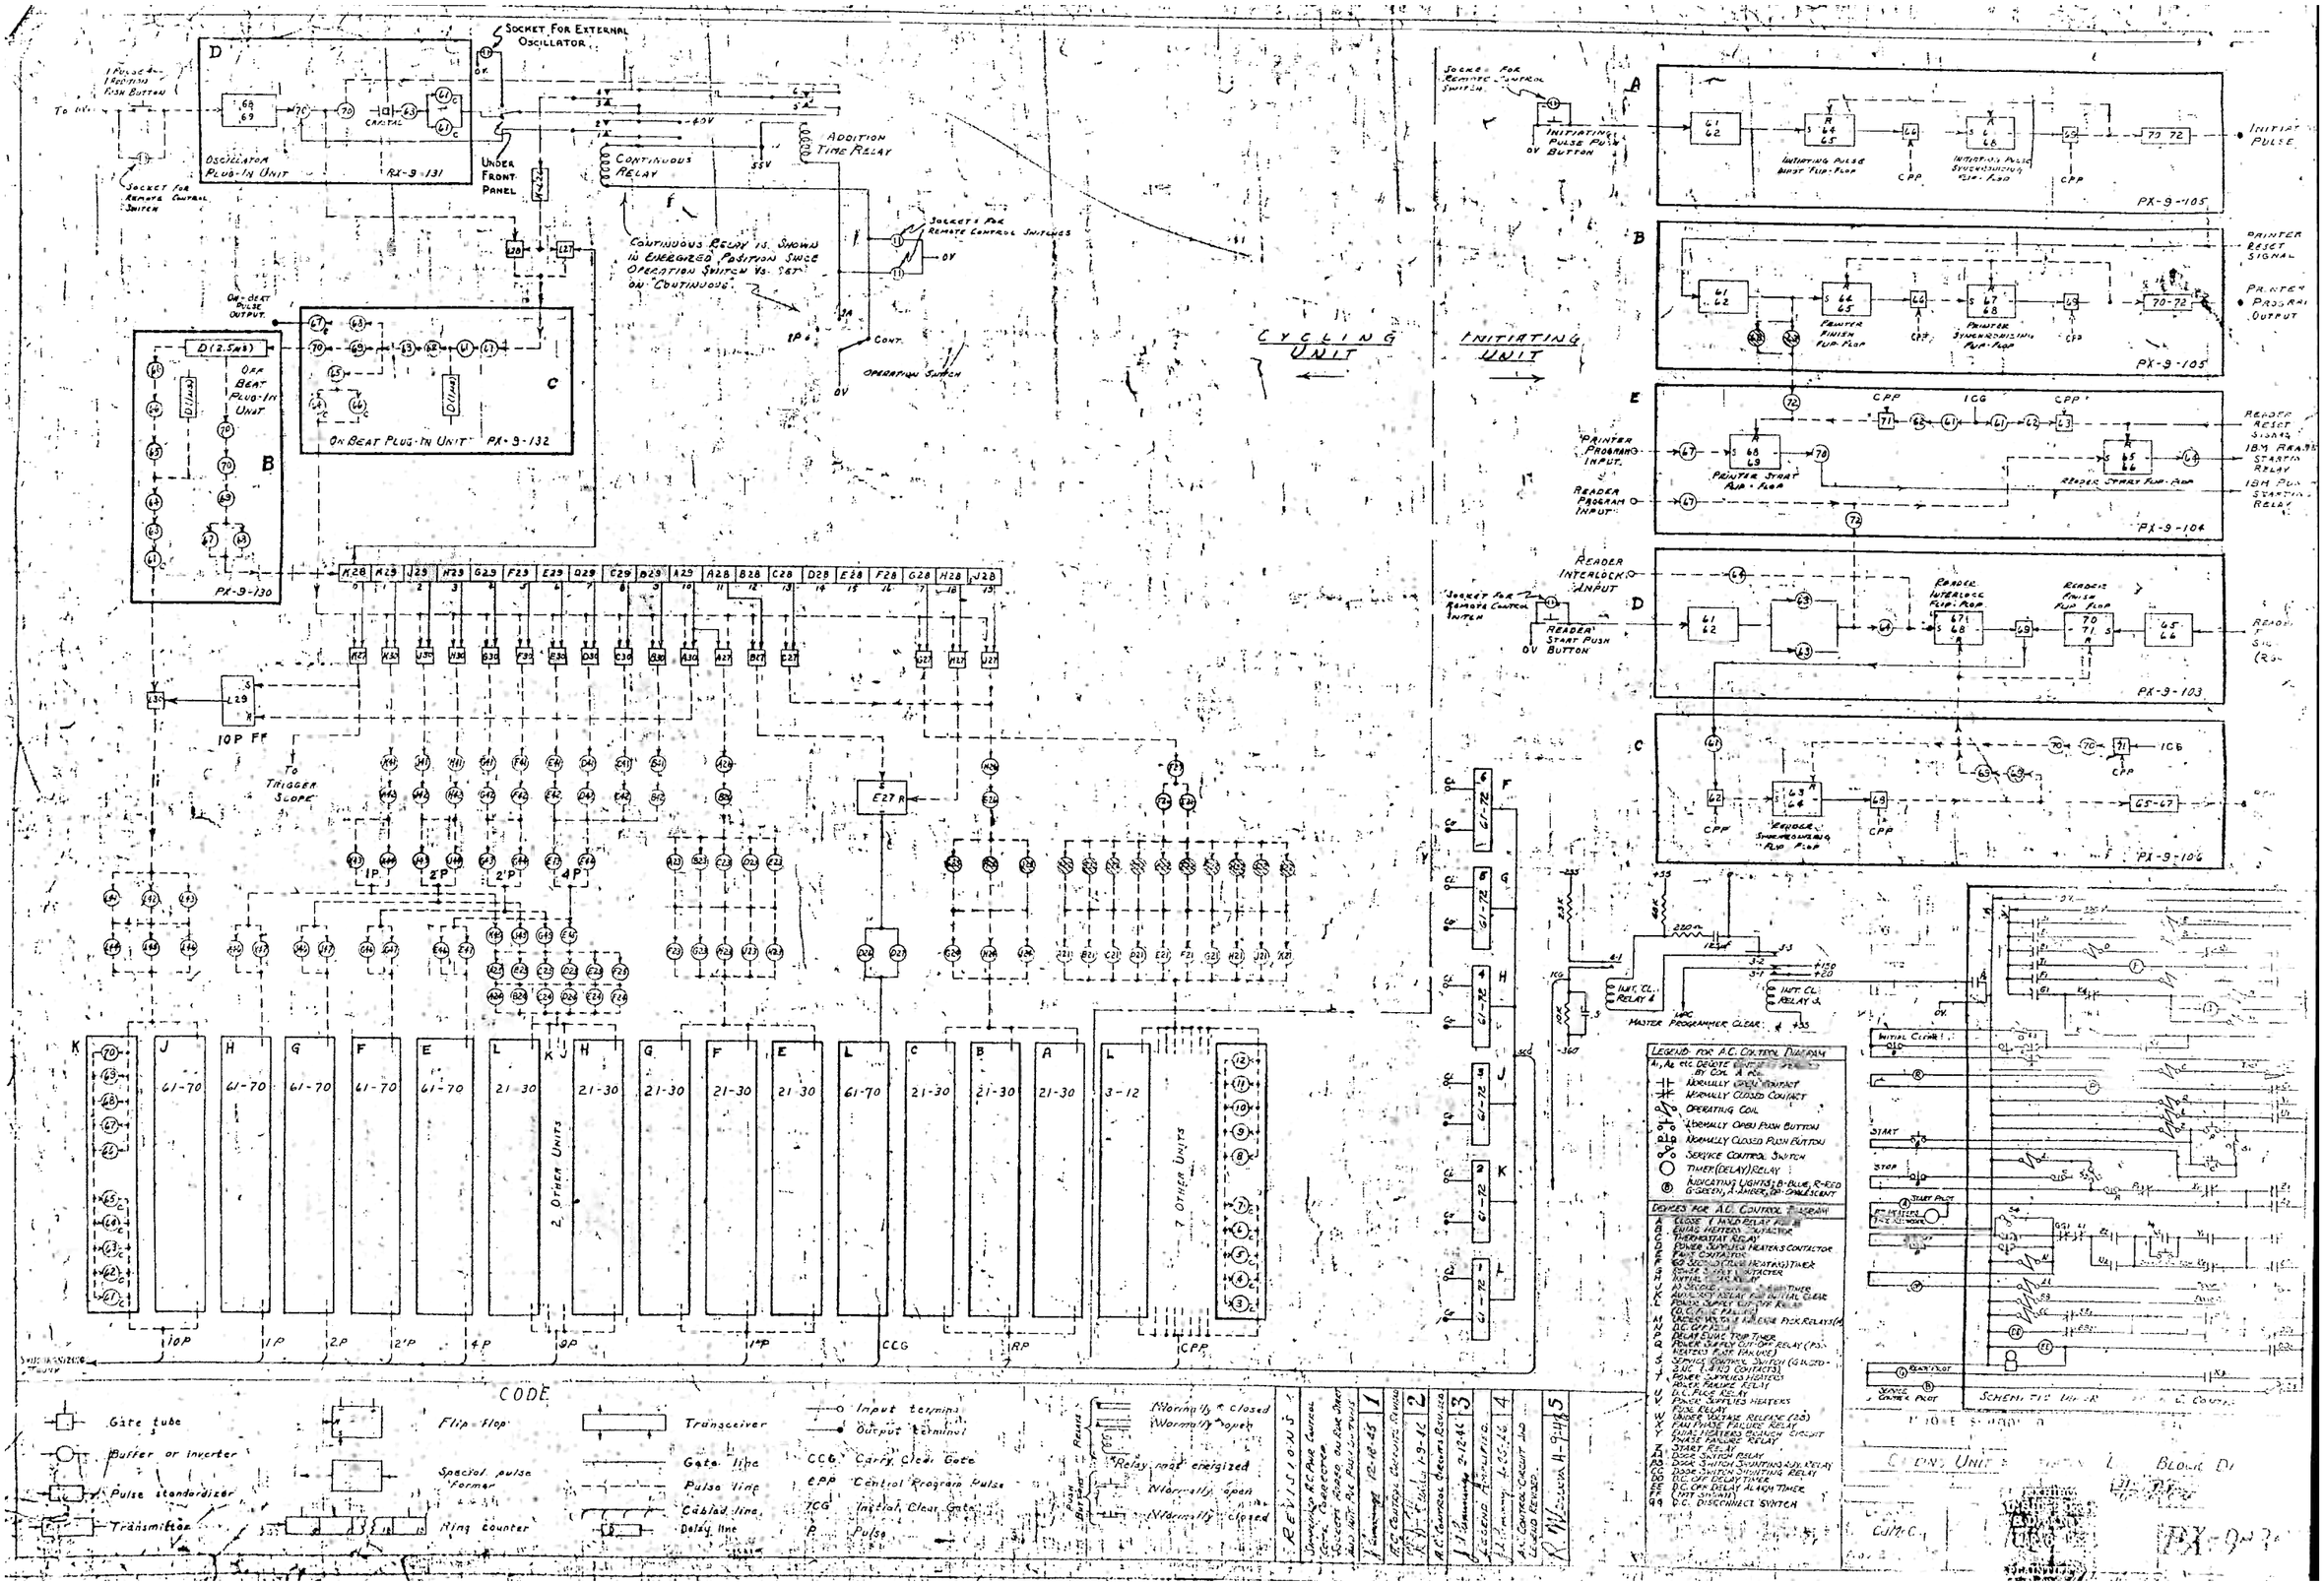
Socket For External Oscillator
Oscillator Plug-In Unit PX-9-131
Under Front Panel
Continuous Relay
Addition Time Relay
Socket For Remote Control Switches
Continuous Relay is Shown in Energized Position Since Operation Switch Is Set on "Continuous"
Operation Switch
On-Beat Pulse Output
On Beat Plug-In Unit PX-9-132
Off Beat Plug-In Unit
PX-9-130
10P FF
To Trigger Scope
Cycling Unit
Initiating Unit
Initiating Pulse Push Button
Initiating Pulse Burst Flip-Flop
Initiating Pulse Synchronizing Flip-Flop
Initiate Pulse
PX-9-105
Printer Reset Signal
Printer Program Output
Printer Finish Flip-Flop
Printer Synchronizing Flip-Flop
Printer Program Input
Reader Program Input
Printer Start Flip-Flop
Reader Start Flip-Flop
PX-9-104
Reader Interlock Input
Reader Start Push Button
Reader Interlock Flip-Flop
Reader Finish Flip-Flop
PX-9-103
Reader Synchronizing Flip-Flop
PX-9-106
Master Programmer Clear
Initial Clear
Start
Stop
Start Pilot
Stop Pilot
Legend for A.C. Control Diagram
Normally Open Contact
Normally Closed Contact
Operating Coil
Normally Open Push Button
Normally Closed Push Button
Service Control Switch
Timer (Delay) Relay
Indicating Lights
Devices for A.C. Control Diagram
Code
Gate tube
Buffer or Inverter
Pulse standardizer
Transmitter
Flip-Flop
Special pulse former
Ring counter
Transceiver
Gate line
Pulse line
Cabled line
Delay line
Input terminal
Output terminal
CCG Carry Clear Gate
CPP Control Program Pulse
ICG Initial Clear Gate
P Pulse
Normally closed
Normally open
Relay not energized
Revisions
Cycling Unit
Block D
PX-9-1